




# **BROILMASTER®**

## **PREMIUM GAS GRILLS**

# **PREMIUM "P" GAS GRILL**

## **OWNER'S MANUAL**

**(NATURAL OR PROPANE GAS)**

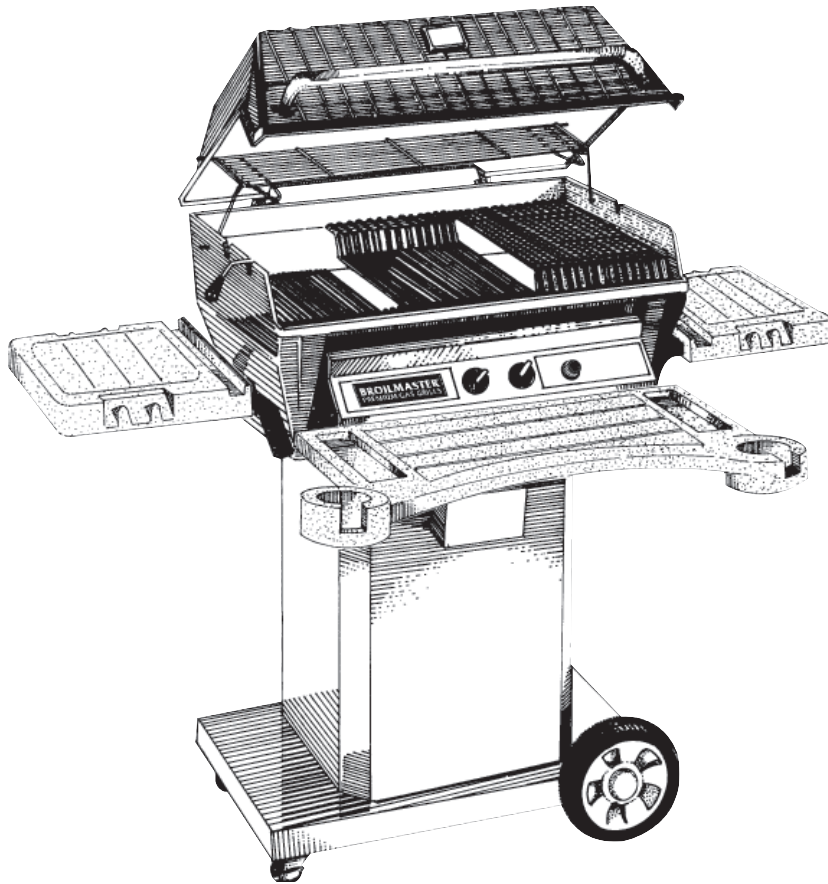

**P3 AND P4 MODELS**

**NOW THAT YOU'VE FOUND EACH OTHER....**

## IMPORTANT

THIS MANUAL SHOULD BE READ THOROUGHLY BY THE PERSON INSTALLING THE GRILL AND ALL PERSONS WHO WILL USE AND MAINTAIN THE GRILL. THE INSTALLER SHOULD BE SURE THE MANUAL IS LEFT IN THE POSSESSION OF THE USER. THE USER SHOULD RETAIN THIS MANUAL FOR FUTURE REFERENCE WHEN USING OR CLEANING THE GRILL AND TO PROPERLY IDENTIFY ANY REPAIR PARTS THAT MAY BE REQUIRED.

## WARNING

REFERENCE THIS MANUAL FOR PROPER INSTALLATION AND MAINTENANCE INSTRUCTIONS. IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PERSONAL INJURY OR PROPERTY DAMAGE. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

## CAUTION: FOR YOUR SAFETY

- IF YOU SMELL GAS:**
1. SHUT OFF GAS TO THE APPLIANCE.
  2. EXTINGUISH ANY OPEN FLAME.
  3. OPEN THE GRILL LID.
  4. IF ODOR CONTINUES, IMMEDIATELY CALL YOUR GAS SUPPLIER OR FIRE DEPARTMENT.
  5. DO NOT TOUCH ELECTRICAL SWITCHES.

## CAUTION: FOR YOUR SAFETY

1. DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.
2. AN LP CYLINDER NOT CONNECTED FOR USE SHALL NOT BE STORED IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

## CAUTION:

PARTS MAY HAVE SHARP EDGES. WEAR LEATHER WORK GLOVES AND HANDLE PARTS CAREFULLY DURING THE UNPACKING, ASSEMBLY AND INSTALLATION.

## WARNING

BROILMASTER® GAS GRILLS MUST **ONLY** USE PROPANE CYLINDERS EQUIPPED WITH AN OVERFILL PROTECTION DEVICE (OPD). USE ONLY A REPUTABLE PROPANE DEALER WHEN EXCHANGING OR FILLING CYLINDERS. AN OVERFILLED OR IMPROPERLY FILLED PROPANE CYLINDER CAN BE DANGEROUS.

# ***Congratulations!***

Welcome to the beauty, durability, and prestige of a PREMIUM GAS GRILL by BROILMASTER®. With award-winning excellence built into every feature and durability that surpasses other premium gas grills, BROILMASTER has manufactured the ultimate gas grill for discriminating outdoor chefs for over 30 years.

At Broilmaster, we continually strive to enhance the performance and quality of our products for your grilling enjoyment. Every effort will be made to ensure that Broilmaster continues to be *your choice* as the premium grill of the future.

Whether you are at the lake or in the privacy of your own backyard, the BROILMASTER® PREMIUM GAS GRILL performs far beyond the ordinary and is designed to provide your family with years of outdoor cooking pleasure.

# ***Thank You!***

*Broilmaster® is a registered trademark of*

**Empire Comfort Systems, Inc.**

918 Freeburg Ave.

Belleville, Illinois 62220

Telephone 800-851-3153

## CONGRATULATIONS!

You have chosen the finest grill for your outdoor cooking pleasure. Please take time to read this entire manual before assembling your premium Broilmaster® gas grill.

Parts	
Diagram .....	3
List .....	4
Grill Assembly .....	5-9
Propane Gas Connection .....	10-12
Gas Conversion .....	13
Natural Gas Connection .....	14
Operation .....	15-16
Maintenance .....	17
Troubleshooting .....	18
Warranty .....	20-21


Your Broilmaster® Premium Gas Grill is identified by model number, serial number, and gas type. This information is provided on a product identification label located on the grill's control panel. For your convenience, complete this section for future reference when contacting your dealer.

Model No. _____	Dealer _____
Serial No. _____	Dealer Phone No. _____
Gas Type: Propane _____ Natural _____	Date of Purchase _____

# PARTS DIAGRAM

3

All repair part orders should be placed through your local Broilmaster® dealer. To locate a dealer in your area, contact Broilmaster Customer Service at (618) 233-7420. To ensure prompt and accurate service, please provide the following information when placing a repair part order: Model Number, Part Name, Part Number, and Quantity of parts needed.

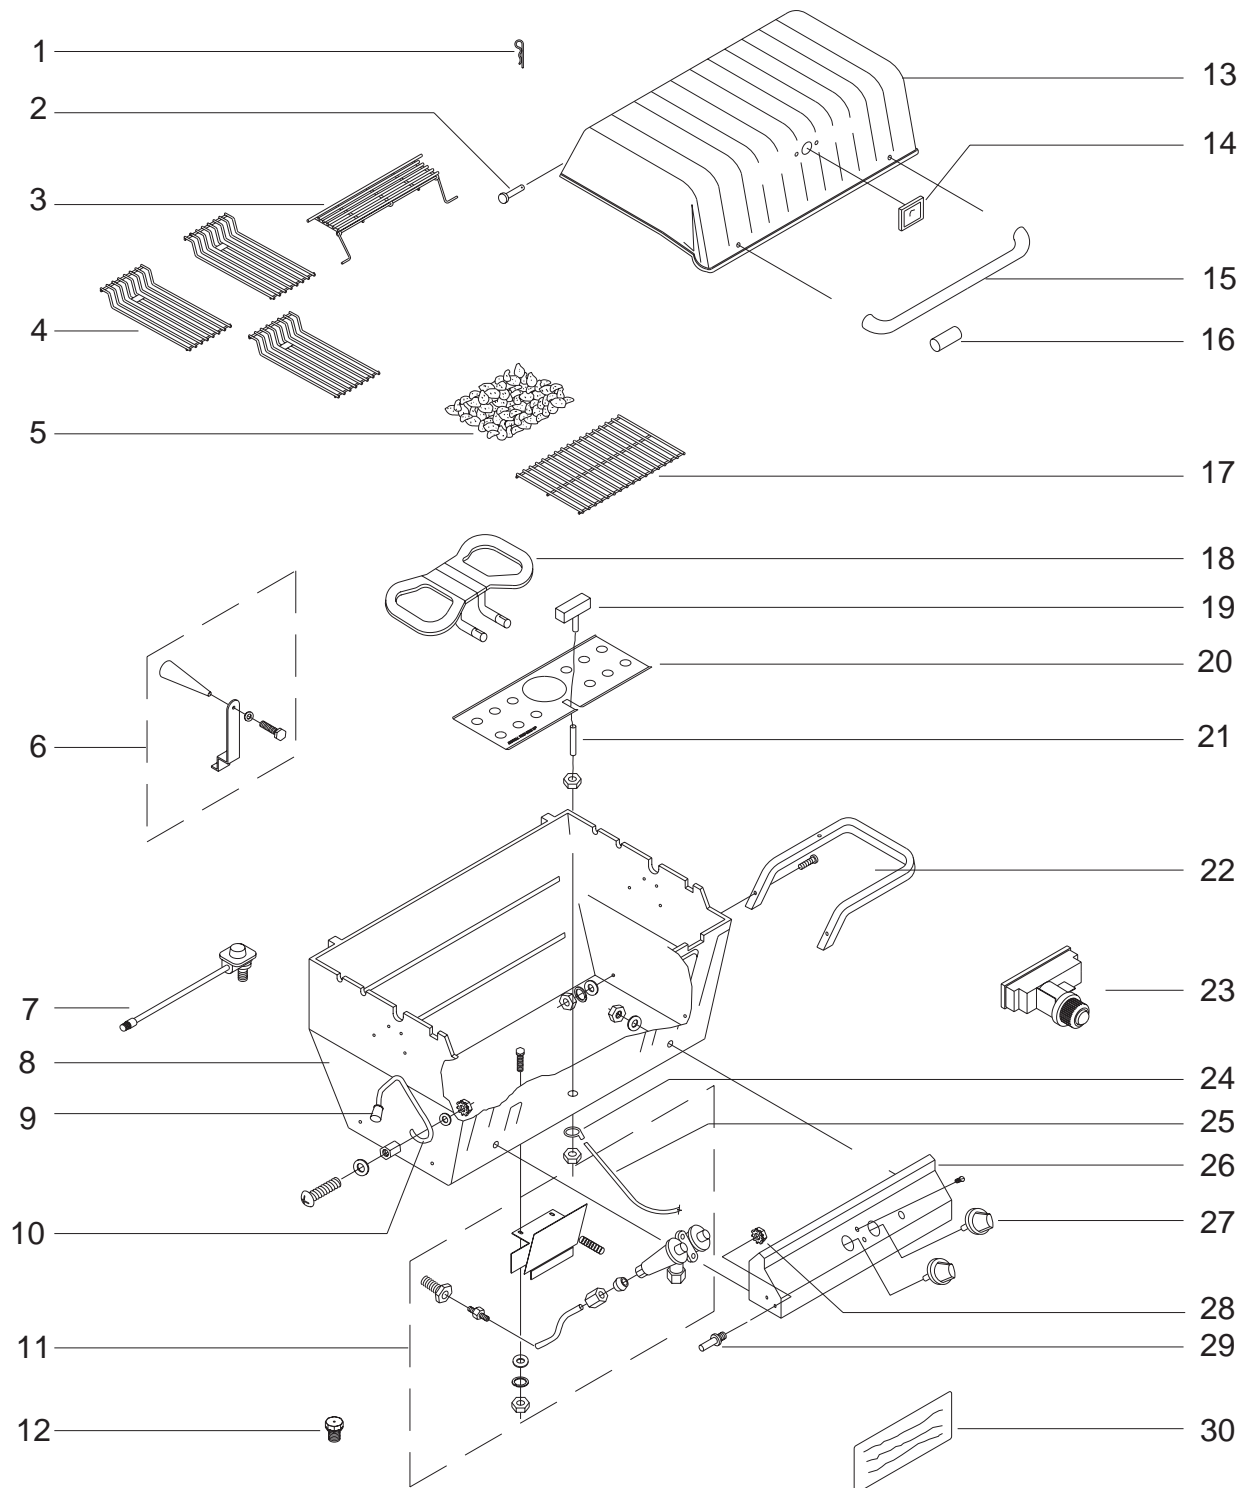

# PREMIUM "P" SERIES PARTS LIST

4

Key No.	Part Name	P3BL Part No.	P3HG Part No.	P3GY Part No.	P4BL Part No.	P4HG Part No.	P4GY Part No.
1	Bridge Pin	057805	057805	057805	057805	057805	057805
2	Hinge Pin	057804	057804	057804	057804	057804	057804
3	Wire Retract-A-Rack	072695	072695	072695	072696	072696	072696
4	Cooking Grid	743100E	743100E	743100E	804687E	804687E	804687E
5	Briquette Bag	058122	058122	058122	058122	058122	058122
6	Grid Lifter Assembly	064539	064539	064539	064539	064539	064539
7	Hose & LP Regulator	069756	069756	069756	069756	069756	069756
8	Grill Bottom	076703	073281	076828	076705	076830	076826
9	Lid Stop Knob	225	225	225	225	225	225
10	Lid Stop	076521	076521	076521	076521	076521	076521
11	Control Valve Assembly (LP)	076790	076790	076790	076790	076790	076790
	Control Valve Assembly (NAT)	076789	076789	076789	076789	076789	076789
12	Natural Orifice Hood *	056647	056647	056647	056647	056647	056647
13	Grill Lid	076702	073280	076827	076704	076829	076825
14	Heat Indicator	076625	076625	076625	076625	076625	076625
15	Stainless Steel Handle	070282	070282	070282	070486	070486	070486
16	Foam Grip	073097	073097	073097	073097	073097	073097
17	Briquette Rack	063066	063066	063066	067449	067449	067449
18	Burner Assembly	878531	878531	878531	814801	814801	814801
19	Collector Box Assembly	072701	072701	072701	072701	072701	072701
20	Radiation Shield	063065	063065	063065	063065	063065	063065
21	Collector Box Spacer	069743	069743	069743	069743	069743	069743
22	Pull Handle	073100	073100	073100	073100	073100	073100
23	Electronic Igniter	072218	072218	072218	072218	072218	072218
24	Igniter Ground Lug	069747	069747	069747	069747	069747	069747
25	Igniter Ground Wire	072684	072684	072684	072684	072684	072684
26	Control Panel Assembly	076653	076653	076653	076626	076626	076626
—	Control Panel Label	072686	072686	072686	072197	072197	072197
27	Valve Knob	070084	070084	070084	070084	070084	070084
28	Keps Nut	073967	073967	073967	073967	073967	073967
29	Shelf Pin	073963	073963	073963	073963	073963	076963
30	Conversion Label *	076535	076535	076535	076535	076535	076535
31	1/4 -20 x 1 1/2 Bolt	076330	076330	076330	076330	076330	076330
32	Spacer	662325	662325	662325	662325	662325	662325
33	9/32 ID x 5/8 OD Flat Washer	076332	076332	076332	076332	076332	076332
34	1/4-20 Hex Nut	076331	076331	076331	076331	076331	076331
35	Lock Washer	076333	076333	076333	076333	076333	076333
36	#10-24 x 3/4 Screw	076522	076522	076522	076522	076522	076522
37	3/8-16 x 1 1/2" Bolt	HD156	HD156	HD156	HD156	HD156	HD156
38	3/8 Star Washer	HD492	HD492	HD492	HD492	HD492	HD492
39	#10-24 x 1 Screw	073978	073978	073978	073978	073978	073978
40	Stabilizer Arm **	906180	906180	906180	906180	906180	906180
41	Stabilizer Bracket **	905048	905048	905048	905048	905048	905048
42	#10-24 x 3/8 Screw **	HD577	HD577	HD577	HD577	HD577	HD577

\* Included with Propane Grills Only.

\*\* Burner Stabilizer Kit is included with your cart.

## Before You Begin

All Broilmaster grills require some assembly and installation. Follow all instructions unless noted to apply only to other specific models.

If you purchased an accessory with your Broilmaster, follow the instructions provided with the accessory for assembly and installation. If an instruction refers to a step that is not required for your grill model, please continue to the next step.

Each step of the installation is illustrated. In each illustration parts are identified with "Key" numbers. Key numbers appear in parenthesis after a part name is mentioned for the first time in the instructions and are labeled on the illustrations. You can reference each part by its key number on the Parts List if you need help in identifying a part.

Compare the parts found in the shipping container to the parts list provided. If any parts are missing contact your Broilmaster® dealer before beginning assembly.

**CAUTION: FOR YOUR SAFETY**  
**PARTS MAY HAVE SHARP EDGES. WEAR LEATHER WORK GLOVES AND HANDLE PARTS CAREFULLY DURING THE UNPACKING, ASSEMBLY AND INSTALLATION.**

## Recommended Tools

These items are recommended for the assembly of your grill:

- Phillips screwdriver
- Adjustable wrench set
- Socket set
- Soapy water solution (to test for leaks)
- Liquid soap (for foam grip)

## Grill Mountings

Refer to the Broilmaster® Cart, Base, and Post instructions provided with each accessory for assembly, installation, and mounting procedures.



## Pull Handle

Place two bolts (31) into holes in pull handle (22) and through holes on left side of grill bottom (8).

Fasten each bolt with a washer (33), lock washer (35), and nut (34). FIGURE 1.

Repeat procedure for the right side.

FIGURE 1

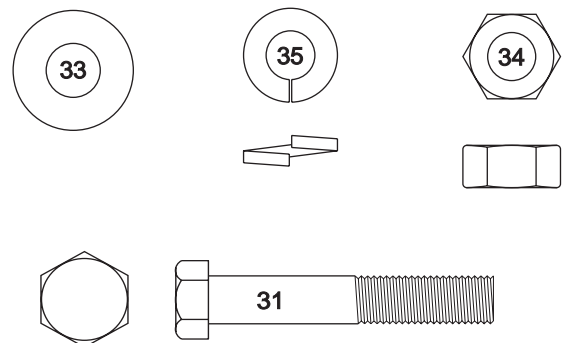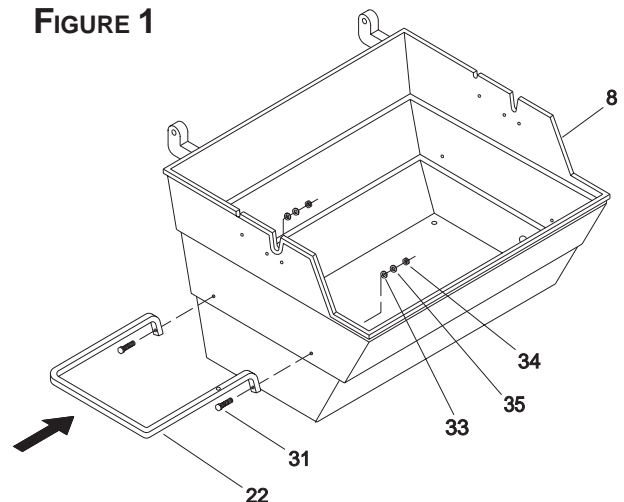



## Igniter Assembly

Slide the collector box spacer (21) and nut (provided on assembly) onto the collector box shaft and tighten. FIGURE 5.

FIGURE 5


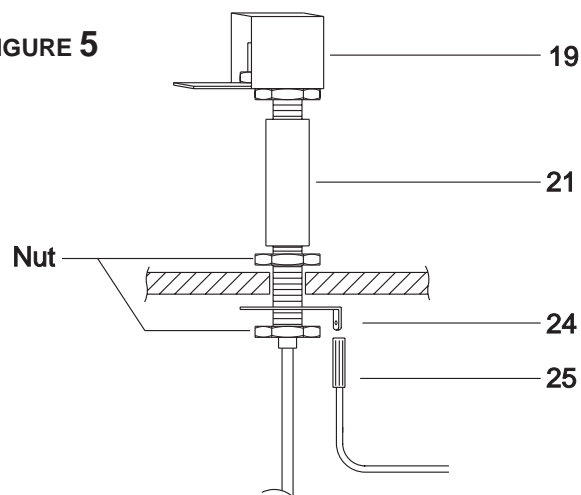


FIGURE 6

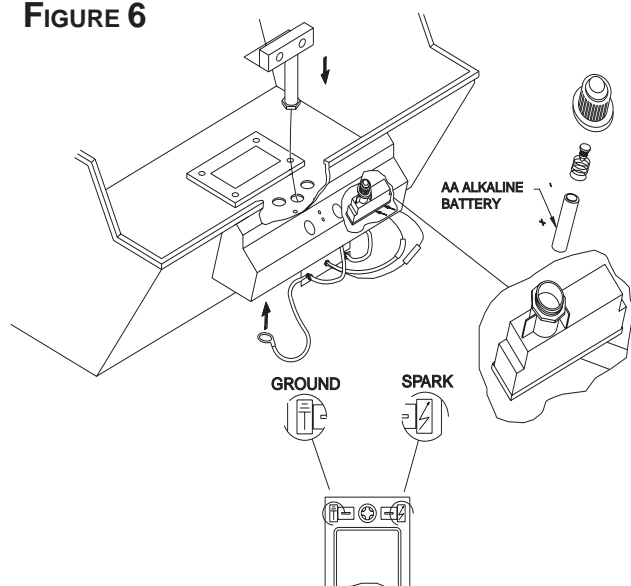


**Battery Installation:** Slide the spring onto the negative end of the battery. Drop the battery and spring into the igniter and replace the button.

## Installing the Igniter

**CAUTION: DO NOT CUT OR DAMAGE IGNITER WIRE.**

Carefully thread the end of the igniter wire through the center hole in the grill bottom. Slide the ground lug (24) over the igniter wire and fasten with nut provided.

Attach one end of the ground wire (25) to the terminal on the rear of the electronic igniter. Attach the remaining end to the ground lug. FIGURES 5 AND 6.

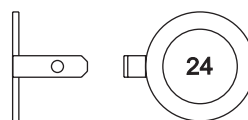


## Burner Stabilizing Arm (Portable Cart Models Only)

On the burner assembly (18) remove the rear screw, insert the burner stabilizing arm (40), and reinstall the screw as shown. FIGURE 7.

**Note:** Burner Stabilizing Arm, Burner Stabilizing Bracket, and Securing the Burner sections of this manual apply only to portable cart models ONLY. Hardware is packaged with your cart.

FIGURE 7

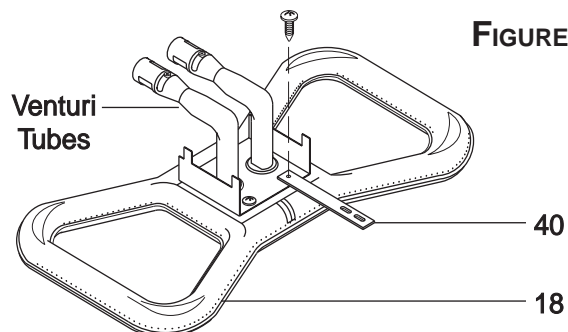



## Burner Stabilizing Bracket (Portable Cart Models Only)

Remove the factory installed phillips screw and speed nut that are located in the grill bottom.

FIGURE 8.

*Tip: Test the alignment of the burner stabilizing brackets before tightening the burner stabilizing bracket.*

Install the burner stabilizing bracket (41) and fasten with the phillips screw and speed nut.

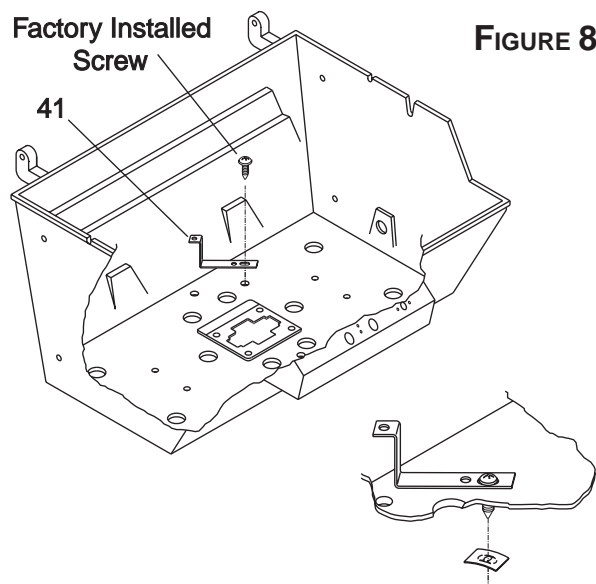


FIGURE 8

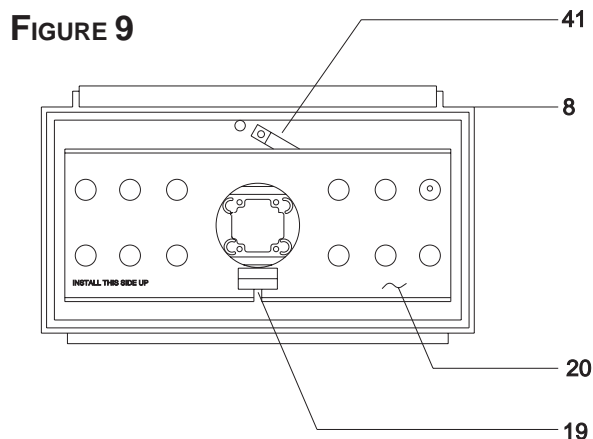


FIGURE 9

## Radiation Shield

Place the radiation shield (20) in the grill bottom. FIGURE 9.

## Installing the Burner

Insert the burner assembly into the grill bottom with the venturi tubes facing the front of the grill. FIGURE 10.

The gas jets from the control valve will be inside the ends of the venturi tubes when properly installed. FIGURE 11.

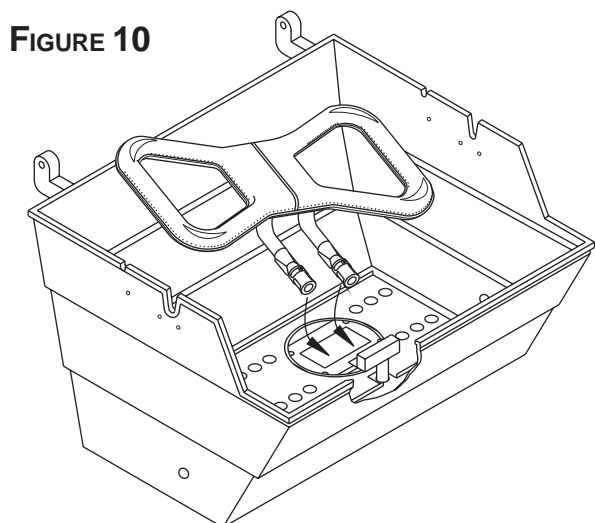


FIGURE 10

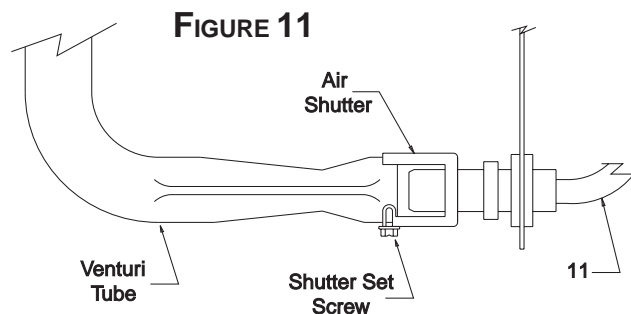


FIGURE 11

## Securing the Burner (Portable Cart Models Only)

Secure the burner by aligning the burner stabilizing bracket and the burner stabilizing arm and fastening with a screw (42) and a keps nut (28). FIGURE 12.



 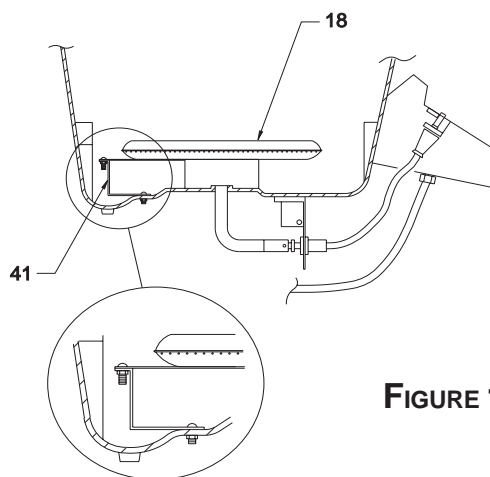



FIGURE 12

FIGURE 13

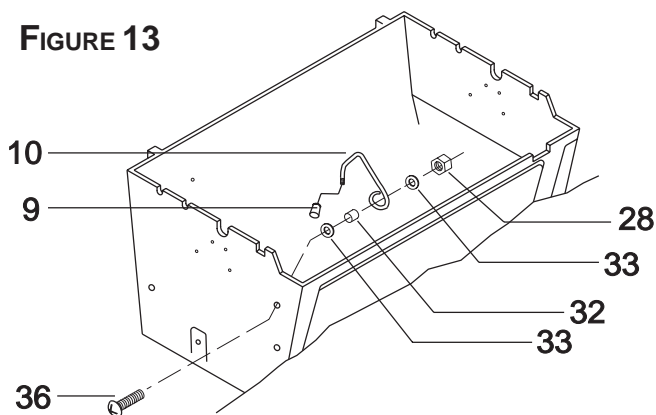

## Lid Stop

Attach the lid stop assembly to the grill bottom as shown. FIGURE 13.

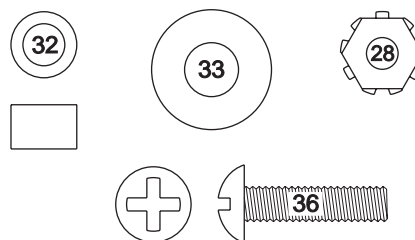

## Handle

For your added comfort a foam grip (16) has been provided. FIGURE 15.

*Tip: For ease of installation, slightly lubricate the front handle with liquid soap before pushing the foam grip into place.*

Fasten the stainless steel front handle (15) to the grill lid (13) with two #10-24 x 1" screws (39). FIGURE 14.


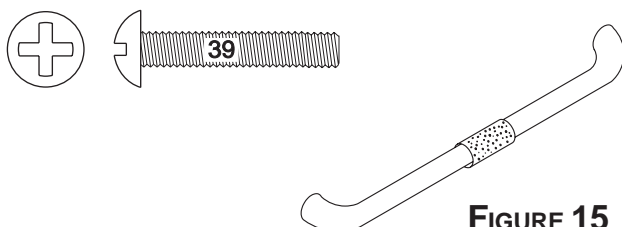


FIGURE 15

FIGURE 14

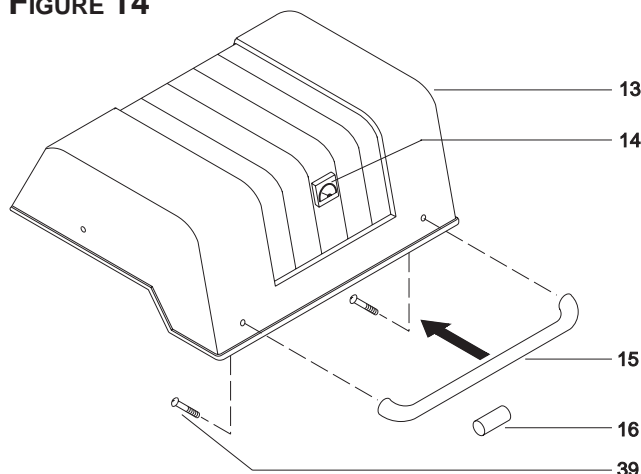

## Installing Racks

Place the briquette rack on the burner assembly.

Position the ceramic briquettes evenly on the briquette rack without overlapping.

Set the multilevel cooking grids FIGURE 17.

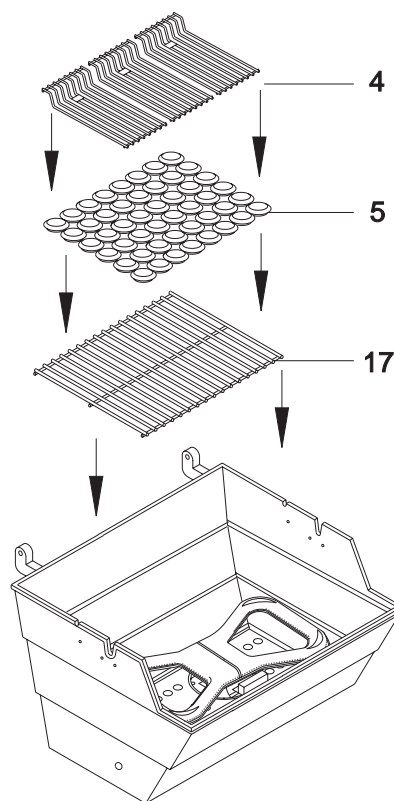


FIGURE 17

## Grid Lifter

Assemble the grid lifter as shown. FIGURE 18.

When positioning or removing grids always use the grid lifter provided with your grill.

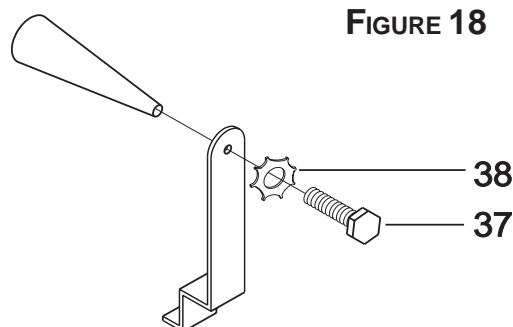
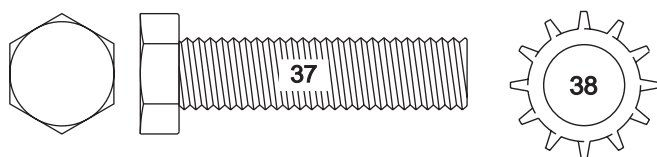


FIGURE 18

## Grill Location

When choosing the ideal location for your Broilmaster® Premium Gas Grill, remember this grill is designed for outdoor use ONLY.

You should never install or operate your grill in any building, garage, or other enclosed area.

For your safety, this grill should not be installed or operated under any combustible materials, such as carports, covered porches, awnings, or overhangs.

Never install or operate your grill in or on any recreational vehicle or boat.

**CAUTION: THE INSTALLATION AND OPERATION OF THIS GRILL AT CLEARANCES LESS THAN SPECIFIED BELOW MAY LEAD TO THE POSSIBILITY OF FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.**

A minimum clearance of sixteen (16") inches is required from the sides of the grill to any combustible material.

A minimum clearance of eighteen (18") inches is required from the back of the grill to any combustible material.

Some examples of combustible materials are a wall, a fence, patio furniture, or the wall of your home.

The area surrounding the grill should be clear to ensure proper ventilation. Do not obstruct the flow of combustion and ventilation air in any way. The ventilation openings on the propane cylinder enclosure must also remain free and clear of debris.

Portable grills should be level and positioned away from direct wind prior to each use.

**WARNING: DO NOT INSTALL OR OPERATE THIS GRILL WHERE GASOLINE OR OTHER FLAMMABLE MATERIALS ARE USED OR STORED. FAILURE TO COMPLY WITH THIS WARNING COULD RESULT IN EXPLOSION OR FIRE CAUSING PROPERTY DAMAGE OR PERSONAL INJURY.**

## Gas Type

Never use Liquid Propane (LP) gas with a grill designed for Natural gas, or Natural gas with a grill designed for Liquid Propane gas. The type gas required for your grill can be determined from the product identification label located on the grill's control panel. Questions regarding different types of gases should be directed to your gas supplier.

## Cylinder Requirements

Your Broilmaster® Premium Gas Grill requires a standard twenty (20) pound propane gas cylinder.

*The maximum height allowable for a replacement cylinder is approximately twelve (12") inches (30.5 centimeters)*

The propane gas cylinder used must be:

1. constructed and marked in accordance with the specifications for LP gas cylinder of the U.S. Department of Transportation (D.O.T.) or the National Standard of Canada, CAN/CSA-B339, Cylinders, Spheres, and Tubes for Transportation of Dangerous Goods; and Commission as applicable.
2. provided with a listed overfilling protection device (OPD).
3. provided with a listed safety device having direct access with the vapor space of the cylinder and the cylinder supply system must be arranged for vapor removal.
4. provided with a shutoff valve terminating in a valve outlet as specified in the Standard for Compressed Gas Cylinder Outlet and Inlet Connections, ANSICGA-V-1.
5. provided with a plug to effectively seal off the cylinder outlet when the cylinder is being stored or transported.
6. provided with a collar to protect the cylinder valve.

**CAUTION: DO NOT USE A PROPANE GAS CYLINDER WHICH HAS A CAPACITY GREATER THAN TWENTY (20) POUNDS WITH THIS GRILL AND SIDE BURNER.**

## Propane Cylinder Safety

Liquid Propane (LP) gas has a long history of safe use when the safety precautions provided in this manual are followed.

**FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD RESULT IN A FIRE OR EXPLOSION CAUSING PROPERTY DAMAGE OR PERSONAL INJURY.**

Propane gas cylinders should always be handled, stored, and transported with extreme caution in a secured upright position.

Never attempt to use or repair a propane gas cylinder that has been damaged. Never attempt to use or repair a cylinder with a faulty or damaged valve outlet. A cylinder that has been dropped, dented, or otherwise damaged must be replaced.

A propane gas cylinder should never be transported in the passenger area of a vehicle.

Keep cylinders out of direct sunlight and never apply any other source of direct heat to them.

When refilling your cylinder, always insist on a reputable, qualified gas dealer. Your propane gas cylinder is filled by weight, and should never exceed eighty (80%) percent of its weight limit. If the cylinder is not completely empty, the gas dealer must make necessary adjustments to ensure it is not overfilled. Never use an overfilled Propane gas cylinder.

## Cylinder Storage

Your grill must be stored outdoors in a well ventilated area if the cylinder is attached to it.

Disconnected cylinders must have a threaded valve plug tightly installed and must not be stored in any building, garage, or other enclosed area.

Flammable materials (gasoline, grill covers, etc.) must not be stored in the cylinder enclosure.

*Always store Propane cylinders in a secured upright position, out of the reach of children.*

## Connection Requirements

**CAUTION: NEVER USE LIQUID PROPANE (LP) GAS IN A GRILL DESIGNED FOR NATURAL GAS, OR NATURAL GAS IN A GRILL DESIGNED FOR LIQUID PROPANE GAS. QUESTIONS REGARDING DIFFERENT TYPES OF GASES SHOULD BE DIRECTED TO YOUR LOCAL GAS SUPPLIER.**

Installation must conform to local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1. In Canada, installation shall be in accordance with CAN/CGA-B149.2 Propane Installation Code, or CAN/CGA-B149.1 Natural Gas Installation Code, and local codes where applicable. Consult your local gas supplier or propane gas dealer for code regulations and recommended procedures.

**WARNING: BROILMASTER® PREMIUM GAS GRILLS REQUIRE LIQUID PROPANE (LP) CYLINDERS EQUIPPED WITH AN OVERFILL PROTECTION DEVICE (OPD). AN OVERFILLED OR IMPROPERLY FILLED PROPANE CYLINDER CAN BE DANGEROUS.**

Always use the pressure regulator and hose assembly supplied with your Propane gas grill.

*Note: Not all valve and cylinder combinations are compatible. Check warning tag on valve and cylinder as well as external fitting threads.*

All Broilmaster® pressure regulators and hose assemblies require Propane cylinders with a Type 1 connection device as illustrated. FIGURE 19.

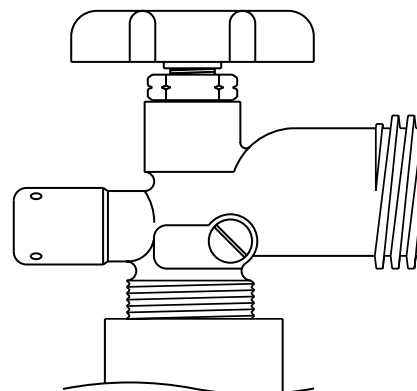


FIGURE 19

## Pressure Regulator and Hose Assembly

The pressure regulator has an outlet pressure of not more than eleven (11") inches water column. It must be connected to the Propane gas cylinder's female valve outlet before the grill can be operated.


**CAUTION: OPERATION OF A PROPANE GAS GRILL WITHOUT THE PRESSURE REGULATOR AND HOSE ASSEMBLY WILL CAUSE GAS LEAKS WHICH COULD LEAD TO FIRE OR EXPLOSION, RESULTING IN PROPERTY DAMAGE OR PERSONAL INJURY.**

The pressure regulator's fitting must remain clean and free of nicks and scratches. A dirty, nicked or scratched fitting can cause a gas leak, resulting in an explosion or fire. Use only genuine Broilmaster® replacement parts unless otherwise specified by the manufacturer.

## Connecting to Propane Gas

Position the cylinder in the opening in the bottom of the cart and secure with the cylinder retaining bracket. FIGURE 20.

**FIGURE 20**

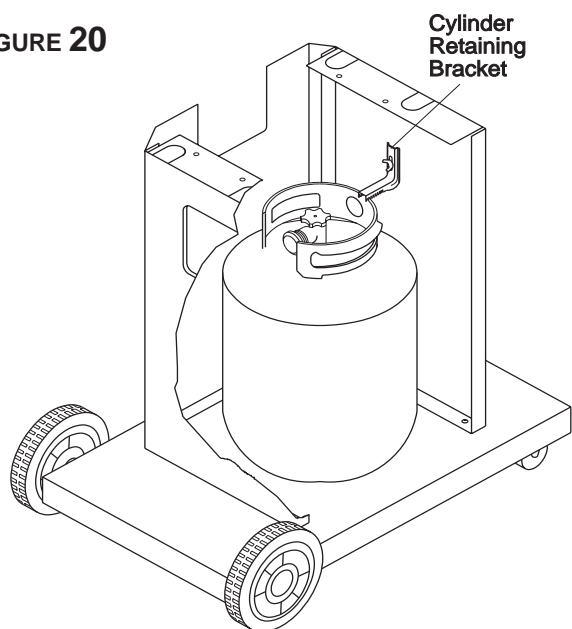


## Connecting to Propane Gas (Continued)

Attach the pressure regulator to the Propane gas cylinder's valve using the plastic handwheel. Tighten in a clockwise motion to achieve a gas tight seal. FIGURE 21.

**CAUTION: DO NOT USE A WRENCH OR ANY OTHER TOOL TO TIGHTEN. USE OF A WRENCH OR OTHER TOOL WILL DAMAGE THE PLASTIC HANDWHEEL.**

**FIGURE 21**

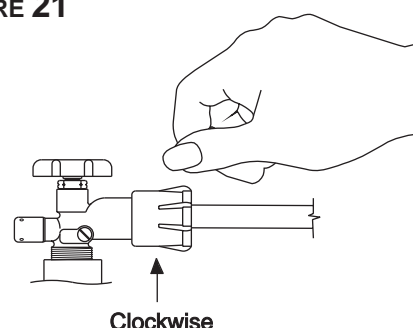


To disconnect the Propane gas cylinder, turn OFF the cylinder's valve and the grill's control valve. Remove the regulator by turning the plastic handwheel counterclockwise.

## Gas Conversion

Propane grills include a conversion kit for natural gas. If you have a natural grill and wish to convert it to propane you will need to purchase the optional conversion kit #CK195.

Begin by removing all the components from the inside of your grill. Locate and remove the orifice hoods mounted on the underside of the grill body. FIGURE 20.

**FIGURE 20**

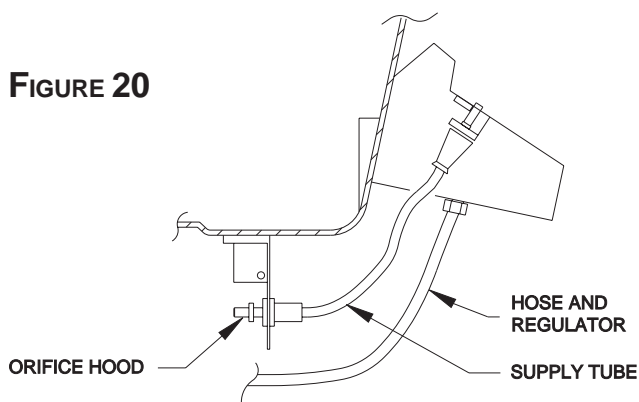


Before installing the natural hoods, inspect them for damage and note the number stamped on the side. The correct hood will be marked "48".

The hoods are self-sealing, requiring no additional pipe sealant. If you wish to use sealant, take care to add it to the threads only to avoid blocking the orifice.

Thread the hoods onto the supply tubes leaving about a 1/8" gap between the hood and the locking nut. FIGURE 21.

**FIGURE 21**

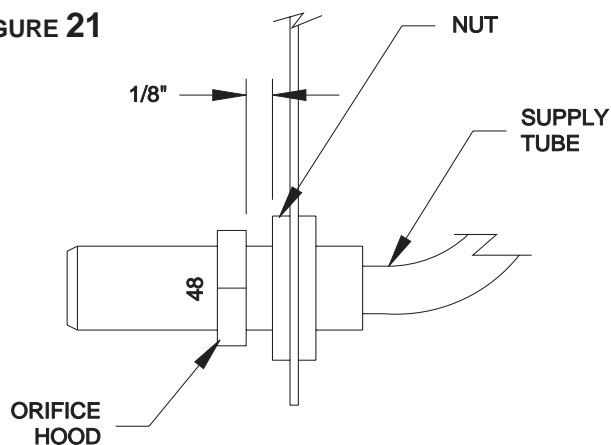

Remove the hose and regulator from the valve.

Replace the components inside of your grill.

Remove the knobs from the valve assembly and locate the adjustment screws on the inside of the valve stem. Using a small screw driver, turn the screws four (4) turns counterclockwise. Do not back the screws out more than 4° turns or a leak may result. FIGURE 22.


Connect the grill to the natural gas supply.

**IMPORTANT: BEFORE LIGHTING YOUR GRILL, CHECK THE GAS CONNECTIONS AND THE ADJUSTMENT SCREWS FOR LEAKS USING A SOAPY WATER SOLUTION.**

**CAUTION: NEVER USE THIS OR ANY GAS APPLIANCE WHICH MAY BE LEAKING GAS.**

Replace the knobs.

**FIGURE 22**

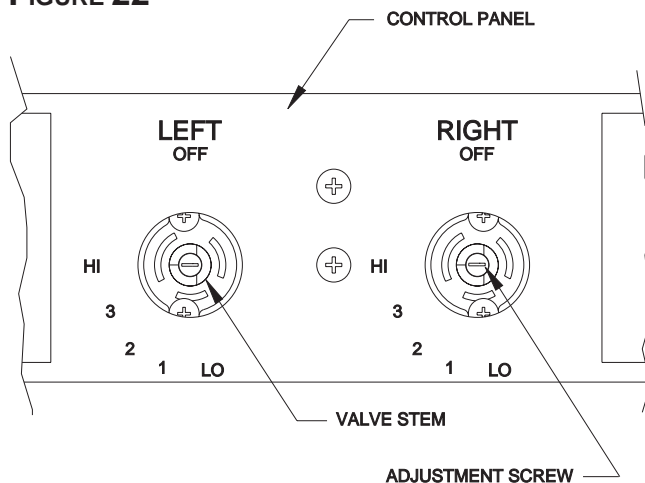

Place the completed conversion label adjacent to the product identification label, located on the control panel (26).



## Grill Location

When choosing the ideal location for your Broilmaster® Premium Gas Grill, remember this grill is designed for outdoor use ONLY.

You should never install or operate your grill in any building, garage, or other enclosed area.

For your safety, this grill should not be installed or operated under any combustible materials, such as carports, covered porches, awnings, or overhangs.

Never install or operate your grill in or on any recreational vehicle or boat.

**CAUTION: THE INSTALLATION AND OPERATION OF THIS GRILL AT CLEARANCES LESS THAN SPECIFIED BELOW MAY LEAD TO THE POSSIBILITY OF FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.**

A minimum clearance of sixteen (16") inches is required from the sides of the grill to any combustible material.

A minimum clearance of eighteen (18") inches is required from the back of the grill to any combustible material.

Some examples of combustible materials are a wall, a fence, patio furniture, or the wall of your home.

The area surrounding the grill should be clear to ensure proper ventilation. Do not obstruct the flow of combustion and ventilation air in any way. The ventilation openings on the propane cylinder enclosure must also remain free and clear of debris.

Portable grills should be level and positioned away from direct wind prior to each use.

**WARNING: DO NOT INSTALL OR OPERATE THIS GRILL WHERE GASOLINE OR OTHER FLAMMABLE MATERIALS ARE USED OR STORED. FAILURE TO COMPLY WITH THIS WARNING COULD RESULT IN EXPLOSION OR FIRE CAUSING PROPERTY DAMAGE OR PERSONAL INJURY.**

## Gas Type

The type gas required for your grill can be determined from the product identification label located on the grill's control panel. Questions regarding different types of gases should be directed to your local gas supplier.

**CAUTION: NEVER USE LIQUID PROPANE (LP) GAS IN A GRILL DESIGNED FOR NATURAL GAS, OR NATURAL GAS IN A GRILL DESIGNED FOR LIQUID PROPANE GAS. QUESTIONS REGARDING DIFFERENT TYPES OF GASES SHOULD BE DIRECTED TO YOUR LOCAL GAS COMPANY.**

## Connection Requirements

Installation must conform to local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1. In Canada, installation shall be in accordance with CAN/CGA-B149.2 Propane Installation Code, or CAN/CGA-B149.1 Natural Gas Installation Code, and local codes where applicable. Contact your local gas company for code regulations, recommended procedures, and the installation of your grill's gas supply line.

Broilmaster® grills are not equipped with pressure regulators. Your gas grill operates at a manifold pressure of seven (7") inches water column.

Connect cart mounted Natural gas grills to a pre-installed gas supply line using the twelve (12') foot flexible hose and quick disconnect kit which can be purchased from your local dealer.

**CAUTION: THE GRILL AND ITS INDIVIDUAL SHUTOFF VALVE MUST BE DISCONNECTED FROM THE GAS SUPPLY PIPING SYSTEM DURING ANY SYSTEM PRESSURE TESTING AT TEST PRESSURES IN EXCESS OF 1/2 PSIG.**

**CAUTION: THE GRILL MUST BE ISOLATED FROM THE GAS SUPPLY PIPING SYSTEM BY CLOSING ITS INDIVIDUAL MANUAL SHUTOFF VALVE DURING ANY PRESSURE TESTING OF THE GAS SUPPLY PIPING SYSTEM AT TEST PRESSURES EQUAL TO OR LESS THAN 1/2 PSIG.**

## Checking for Gas Leaks

Check for gas leaks every time you connect your Broilmaster® propane gas grill to a Propane gas cylinder, when a connected cylinder has not been used recently, or when either a natural or propane grill is being used for the first time.

**CAUTION: DO NOT USE AN OPEN FLAME WHEN CHECKING FOR LEAKS. CHECKING FOR LEAKS WITH AN OPEN FLAME MAY LEAD TO A FIRE OR EXPLOSION, RESULTING IN PROPERTY DAMAGE OR PERSONAL INJURY.**

To check for gas leaks:

1. Use dish washing liquid and a little water to make a soapy solution.
2. Turn OFF the knob on the control panel.
3. Turn ON the gas at the supply or cylinder. A hissing sound indicates a leak. Turn OFF the gas and repair the leak.
4. Apply the soapy water solution to all gas connections.
5. Look for bubbles. Bubbles indicate a leak.
6. If there are bubbles turn OFF the gas and repair the leak.
7. Turn the gas back ON and repeat the above procedures until all leaks are repaired.

## Air Shutter Adjustment

The venturi air shutter(s) are preset at the factory so that after five minutes the burner flames are blue with well defined cones. If, after five minutes the flame is yellow, or there is a gap between the burner and the flame, adjust the venturi air shutter as follows:

1. Turn gas OFF and let the burner cool.
2. Loosen shutter set screw
3. Close the air shutter to the minimum opening. Refer to Figure 11.
4. Light the burner, wait five minutes and then carefully open the air shutter until the flame is blue and well defined.
5. Retighten the set screw.

## Operating Instructions

### Using the Igniter

**CAUTION: IF A BURNER FAILS TO LIGHT AFTER 5 SECONDS, TURN THE BURNER OFF FOR 5 MINUTES, TO ALLOW THE GAS TO CLEAR, THEN TRY AGAIN.**

1. Turn knob on the grill CLOCKWISE to the OFF position.
2. Turn ON gas at the source.
3. With the grill lid open, push and turn the burner control knob COUNTERCLOCKWISE to Hi.
4. Push and hold the igniter button until the burner lights (approximately 5 seconds).
5. If a burner does not light, turn OFF all gas and refer to the Troubleshooting section of this manual.

## Operating Instructions

### Using Matches

**CAUTION: IF A BURNER FAILS TO LIGHT AFTER 5 SECONDS, TURN THE BURNER OFF FOR 5 MINUTES, TO ALLOW THE GAS TO CLEAR, THEN TRY AGAIN.**

1. Turn knob on the grill CLOCKWISE to the OFF position.
2. Turn ON gas at the source.
3. Open the grill lid.
4. Insert a burning long wooden match through the lighter hole on either side of the grill.
5. Turn the burner control knob COUNTERCLOCKWISE to HI.
6. If a burner does not light, turn OFF all gas and refer to the Troubleshooting section of this manual. FIGURE 23.

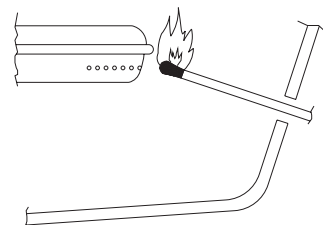


FIGURE 23

## Before Cooking

Before cooking on a grill for the first time, it should be broken in to burn off any oil residue from the manufacturing process.

1. Raise the grill lid.
2. Light grill burner.
3. Burn on HI for ten minutes.
4. Close the lid and burn on HI for an additional ten minutes.
5. Turn OFF gas. The grill is now ready for use.

## Preheating

Before cooking on a gas grill, allow the grill to preheat on HI for 5 minutes with the lid closed. This uses very little fuel and hot briquette cook quicker and provide better flavor.

## Cooking

Broilmaster® is happy to provide a cookbook with each of its grills. The cookbook contains helpful cooking tips and instructions as well as great tasting recipes for preparing many delicious foods on your grill.

## Electrical Accessories

If an electrical accessory (e.g. rotisserie) is used on your grill, the accessory must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electric Code, ANSI/NFPA 70. In Canada, the electrical accessory must be electrically grounded in accordance with the applicable section of the current Canadian Electrical Code, CSA C22.1.

Any electrical accessory should be equipped with a three-prong (grounding) plug, and plugged into a properly grounded three-prong receptacle or wall outlet. Do not cut or remove the grounding prong from the plug.

If an extension cord is required, use only a three-prong cord and plug into a properly grounded receptacle as described above.

Do not expose an electrical accessory to water. Avoid using any electrical accessory in wet weather as it may present a shock hazard.

Keep any electrical cord and fuel supply hose away from all heated surfaces.

## Cleaning the Grill

**CAUTION:** TO PREVENT INJURY, USE CARE WHEN CLEANING A HOT GRILL.

**NOTE:** DO NOT USE A COMMERCIAL CLEANER ON THE COOKING GRID. DO NOT BRUSH GRIDS WHILE THEY ARE HOT. DO NOT SCRAPE GRIDS.

For baked on residue use a brass (NOT STEEL) brush on the cooking grid and other components.

## Burn Off

This process is much like that used in self-cleaning ovens and is most efficient when completed after each use of the grill.

**CAUTION:** DO NOT OPEN THE GRILL DURING THE BURN OFF PROCESS. OPENING THE GRILL DURING THE BURN OFF PROCESS MAY CAUSE A SUDDEN GREASE FIRE FLARE UP THAT COULD BURN YOUR FACE AND ARMS. WAIT UNTIL THE GRILL HAS COOLED BEFORE OPENING.

1. Turn gas knob to HI. Close lid and allow the grill to burn for ten minutes, or until no smoke is present. Do not allow the grill to burn for more than 30 minutes.
2. Turn gas knob and supply to OFF and allow the grill to cool.
3. Wipe COOL grill with a damp cloth to remove soot.

## Grill Bottom

Periodically remove cooking grids and flare guard to clean the interior of the grill. Scrape off baked on residue with a putty knife or brass brush and rinse with water. Clean the bottom air holes with a small knife.

## Burner Maintenance

Stainless steel burners often turn reddish brown after use. This does not effect the performance of the grill. When cleaning the interior of the grill, remove the burners and clean with a brass brush. Wash with water and a mild detergent.

## Grease Tray


Empty periodically. Replacement tray liners can be purchased at most supermarkets where disposable aluminum baking pans are displayed.

## Venturi Tubes

The venturi tubes allow air and gas to mix prior to burning, thus ensuring an efficient flame. Spiders or other small insects may build webs or nests inside the tubes obstructing air flow. Fire, or flashback, can occur, in and/or around obstructed venturi tubes and can cause damage to components beneath the grill or an unsafe condition. To reduce risk, inspections and cleaning should be performed at least twice monthly when spiders are active. If the grill has been unused for an extended period of time inspect the tubes before using the grill.

Clean venturi tubes as follows:

1. Remove the cooking grids and briquette rack.
2. Remove the burner from the grill.
3. Lay the burner face down and remove the four retaining screws from the venturi tube plate and the burner. FIGURE 24.
4. Use a small flexible brush to remove any debris for the tube(s).
5. Flush with water.
6. Allow the tube(s) to dry before reinstalling.
7. Reinstall the venturi tubes and burner.

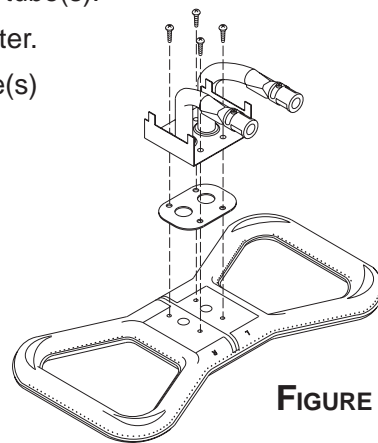

**FIGURE 24**

## Exterior

Clean regularly with a solution of mild detergent and hot water. Touch-up paint is available from your dealer. Broilmaster® protective covers are recommended. Stainless steel components can be easily cleaned with a spray-on stainless steel cleaner found in most hardware stores.

## Briquettes

If the briquettes did not come clean during burn off, after cooling turn them over. The residue will burn off during warm-up for the next use.

Although the manufacturer has attempted to ensure that your grill will operate properly and satisfactorily, sometimes problems do arise. The following troubleshooting guide lists several possible problems and their probable cause and solution.

Problem	Cause	Solution
Burner will not light.	Gas injector not inserted in venturi tube.	Realign/engage gas injector with the venturi tube.
	Clogged gas injector.	Remove gas injector from gas control assembly and clean.
	Obstruction in gas line.	For propane models, ensure gas valve on cylinder is OFF. Remove flexible hose and blow out any debris.
	Spider webs in venturi tubes.	Clean venturi tubes. See Maintenance Section.
	Misalignment of collector box and burner.	Position electrode properly. Clean collector box.
	Out of gas.	Refill LP gas cylinder. If natural model, turn on gas at source.
	Dead battery.	Replace with AA Alkaline battery.
Inadequate grill temperature.	Poor combustion.	Adjust air shutter.
	Misalignment of venturi tube and gas injector.	Realign/engage gas injector with the venturi tube.
	Inadequate gas pressure.	Contact gas supplier for assistance.
	Incorrect orifice/valve setting.	Refer to gas conversion instructions in this manual.
Flames blow out.	Cold grill.	Preheat grill at least 5 minutes on HI with the grill lid closed.
	Misalignment of burner tube and gas injector.	Realign/engage gas injector with the burner tube.
	Poor combustion.	Adjust air shutter.
	Extreme wind.	Turn or shield grill.
Yellow flames.	Air shutter improperly set.	Open air shutter. See Maintenance Section.
	Spider webs in venturi tubes.	Clean venturi tubes. See Maintenance Section.
	Seasoning salts on burner.	Clean by washing burner with mild detergent.
	Oil film on burner.	Allow burner to operate on HI for 10-15 minutes.





## LIMITED WARRANTY

Manufactured by: BROILMASTER®, A Division of Empire Comfort Systems, Inc., 918 Freeburg Ave., Belleville, Illinois 62220.

### WHAT IS COVERED AND FOR HOW LONG

From the date this gas grill is first purchased for use, BROILMASTER® will make available, at our factory, a free replacement for any defective part in accordance with the following limitations:

- **PERMANENT MOLD ALUMINUM GRILL HOUSING** - Lifetime by original purchaser for as long as grill is, and safely can be used as a residential grill.
- **PORCELAIN COATED CAST IRON COOKING GRID** - Lifetime by original purchaser for as long as grill is, and safely can be used as a residential grill. The use of a brass bristle brush in conjunction with regular burn off is recommended. Damage by dropping, scraping, or abrasive cleaning voids this warranty.
- **STAINLESS STEEL BOWTIE BURNER** - 15 years prorated with the following schedule:  
Years 1-5 = Full 100% replacement.  
Years 6-10 = Consumer to pay 50% retail price in effect.  
Years 11-15 = Consumer to pay 75% retail price in effect.  
Warranty replacement claims in years 6-15 must be made directly to Empire Comfort Systems, Inc.
- **STAINLESS STEEL CART** - Lifetime by original purchaser for as long as grill is, and safely can be used as a residential grill.
- **STAINLESS STEEL BODY, LID, AND MOUNTINGS** - Lifetime, as long as grill is, and safely can be, used as a residential gas grill.
- **PAINTED ELECTROGALVANIZED STEEL COMPONENTS** - 5 years against perforation.
- **PORCELAIN COATED STEEL COOKING RACKS** - 2 YEARS (S5 MODELS)
- **ALL OTHER PARTS** - 2 years from date of purchase.

### WHAT IS NOT COVERED

- Removal and reinstallation cost.
  - Labor costs for replacement or repairs.
  - Transportation or shipping cost.
  - The cost of a service call to diagnose trouble.
  - Finishes on surfaces.
  - Damage caused by improper installation, improper storage, accident, misuse, abuse or alteration.
  - Unsatisfactory performance due to improper or lack of cleaning.
-



## LIMITATIONS AND EXCLUSIONS

1. No one has authority to add to or vary this limited warranty, or to create for BROILMASTER® any other obligation of liability in connection with this grill.
2. ANY IMPLIED WARRANTY APPLICABLE TO THIS GRILL IS LIMITED IN DURATION TO THE SAME PERIOD OF TIME AS THIS WRITTEN WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
3. BROILMASTER® SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL OR CONTINGENT DAMAGES YOU MIGHT SUFFER AS A RESULT OF ITS BREACH OF THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitations may not apply to you.
4. This warranty applies only to the original purchaser and may not be transferred.
5. This warranty applies only to a grill sold and used in the United States or Canada.
6. This warranty applies only to a gas grill.
7. If you cannot verify the purchase date of the grill the warranty period will begin on the date the grill was manufactured.
8. Replacement or repair parts are warranted for the remaining period of the original part warranty.

## YOUR DUTIES

This grill must be assembled, installed, operated and maintained in accordance with all applicable codes and the instruction manual furnished with the grill. You must keep an invoice, canceled check or payment record to verify the purchase date of the grill.

## IF YOU HAVE A PROBLEM WITH YOUR GRILL

1. Contact your BROILMASTER® dealer. If you cannot locate your dealer, call or write BROILMASTER® Technical Service Department as indicated below.
2. If you do not receive satisfactory service from the dealer within a reasonable time, write BROILMASTER® Technical Service Department and include the date you purchased your grill, its model and serial numbers, the name and address of the dealer from whom it was purchased, and a description of the problem you are having. Furnish a dated proof of purchase if your grill is within its warranty period.
3. In years six through fifteen all burner warranty claims are to be submitted directly to BROILMASTER® in Florence, Alabama, along with a copy of a dated receipt of bill of sale covering the purchase of the grill.

Technical Service Department  
**BROILMASTER®**  
A Division of Empire Comfort Systems, Inc.  
918 Freeburg Ave.  
Belleville, Illinois 62220  
Phone: 800-851-3153 Fax: 618-233-7097

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

---

**KEEP THE RELATIONSHIP SOLID...**



**THE MOST DURABLE GRILL  
KNOWN TO MAN**

**BROILMASTER®**

A Division of Empire Comfort Systems, Inc.  
918 Freeburg Ave.

Belleville, Illinois 62220

Phone: 800-851-3153 Fax: 618-233-7097

VISIT OUR WEB SITE AT [www.broilmaster.com](http://www.broilmaster.com)